

SIDE SPRAY INSTALLATION


INSTRUCTIONS

NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

MODEL No's: 129, 1291, 2470-5703, 3220-5703

● Recommended installation by a Professional Plumbing Contractor

- Remove MOUNTING KIT (1) from threaded shank of ESCUTCHEON (2) and SPRAY HOSE (3).
- Drop SPRAY HOSE (3) and ESCUTCHEON (2) unit through mounting hole surface.
- From underside of mounting surface, slide SPRAY HOSE through MOUNTING KIT (1) and secure into place by threading MOUNTING KIT (1) onto shank of ESCUTCHEON (2).

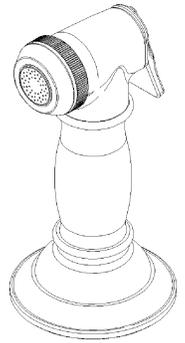

Connect to existing faucet options:

NOTE: DO NOT CONNECT SIDE SPRAY HOSE DIRECTLY TO THE MAIN WATER SUPPLY.

a. Wide spread faucets - Remove DIVERTER TEE ADAPTER PLUG (4) from end of SPOUT DIVERTER (5). Utilizing ADAPTER (6), connect SPRAY HOSE (3) to SPOUT DIVERTER (5)

b. Bridge faucets - Thread SPRAY HOSE (3) into base of DIVERTER ASSEMBLY BLOCK (7). Do not use ADAPTER (6)

